

 
SHARP SERVICE MANUAL

No. 00ZUXB700ESME

SUPPLEMENT

FACSIMILE

MODEL UX-B700E

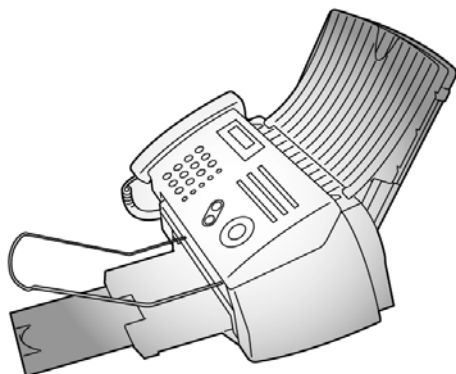

MODEL	SELECTION CODE	DESTINATION
UX-B700	E	U.S.A.

This Service Manual UX-B700E appear only a change from the service manual UX-B700 which has already been issued. Please refer to it in accordance with the Service Manual of UX-B700 (00ZUXB700USME).

Specification of UX-B700E is changed as follows:

- 1.Colors of the cabinet, panel unit, etc. are changed. "E" is added to the decoration panel and the spec sheet.
- 2.The Secure FAX Receive and the 2-Sided Send/Copy functions are added.
The following parts are changed accordingly.


Parts marked with "⚠" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

CHAPTER 1. DIFFERENCE

[1] Operation panel change

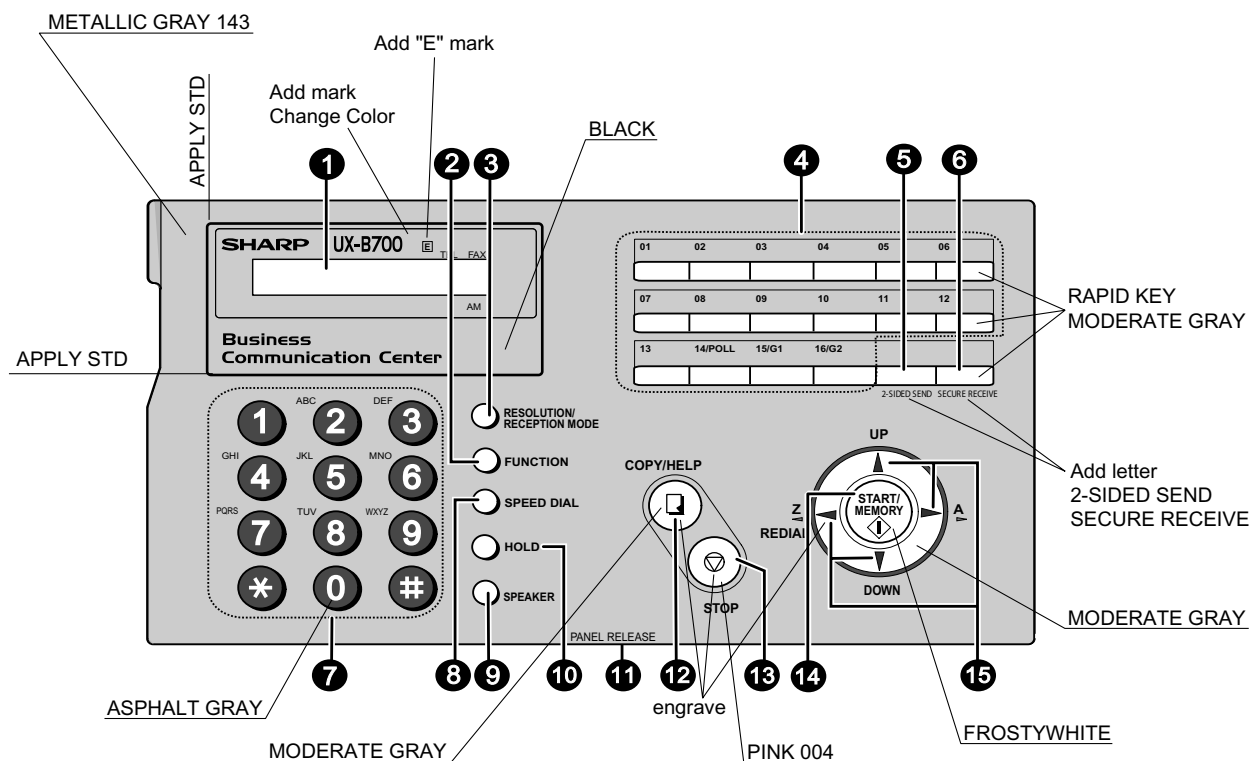


- 1 Display**
This displays messages and prompts to help you operate the machine.
- 2 FUNCTION key**
Press this key followed by the arrow keys to select special functions and settings.
- 3 RESOLUTION / RECEPTION MODE key**
When a document is in the feeder, press this key to adjust the resolution for faxing or copying. At any other time, press this key to select the reception mode (an arrow in the display will point to the currently selected reception mode).
- 4 Rapid Dial Keys**
Press one of these keys to dial a fax number automatically.
- 5 2-SIDED SEND key**
Press this key to fax or copy two-sided documents.
- 6 SECURE RECEIVE key**
This key is used to set up and use the Secure Receive function, which holds received faxes in memory instead of printing them as they are received. To print the faxes, the programmed Secure Receive code must be entered.
- 7 Number keys**
Use these keys to dial numbers, and enter numbers and letters when storing auto-dial numbers.
- 8 SPEED DIAL key**
Press this key to dial a fax or voice number using an abbreviated 2-digit Speed Dial number.
- 9 SPEAKER key**
Press this key to listen to the line and fax tones through the speaker when faxing a document.
Note: **This is not a speakerphone.** You must pick up the handset to talk with the other party.
- 10 HOLD key**
Press this key to put the other party on hold during a phone conversation. When this is done, they cannot hear you. You can put the handset back in the cradle without breaking the connection. When you are ready to speak with the other party again, pick up the handset. If you did not put the handset back in the cradle, press the **HOLD** key again to resume conversation.
- 11 PANEL RELEASE**
Grasp here and pull up to open the operation panel.
- 12 COPY/HELP key**
When a document is in the feeder, press this key to make a copy of a document. At any other time, press this key to print out the Help List, a quick reference guide to the operation of your fax machine.
- 13 STOP key**
Press this key to cancel an operation before it is completed.
- 14 START/MEMORY key**
Press this key after dialing to begin fax transmission. Press this key before dialing to send a fax through memory. The key can also be pressed in the date and time display to show the percentage of memory currently used.
- 15 Arrow keys**
Use these keys to scroll through and select settings, and to search for auto-dial numbers.


[2] Difference table**1. Difference between UX-B700 (To the production in November 2004) and UX-B700E (From the production in December 2004)**

UX-B700E(From the production in December 2004)						UX-B700 (To the production in November 2004)	
PG NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION	PG NO.	PARTS CODE
1-1	DCEKC886UXHZZ	BN	N	E	Control PWB unit(Within ROM)	1-1	DCEKC580TXHZZ
1-2	GCABB2419XHSD	BE		D	Bottom cabinet	1-2	GCABB2419XHSA
1-8	GCABA2418XHSD	BF		D	Upper cabinet	1-8	GCABA2418XHSC
1-9	GCOVA2458XHSC	AS		C	Back cover	1-9	GCOVA2458XHSA
1-10	GCOVA2467XHSD	AQ		C	Front cover	1-10	GCOVA2467XHSC
1-24	LPLTP3260XHSC	AP		C	Exit tray	1-24	LPLTP3260XHSA
1-25	LPLTP3261XHSC	AM		C	Extension exit tray	1-25	LPLTP3261XHSA
1-26	LPLTP3263XHSH	AM		C	RP release plate	1-26	LPLTP3263XHSE
1-49	PHOP-2095XHVC	AU		C	Paper hopper	1-49	PHOP-2095XHVA
2-2	HPNLH2426XHZL	AK	N	D	Decoration panel	2-2	HPNLH2426XHZZ
2-3	GCASP2168XHSL	AV	N	D	Panel case	2-3	GCASP2168XHSA
2-4	JBTN-2381XHSC	AM		C	12 key	2-4	JBTN-2381XHSA
2-5	JBTN-2382XHSD	AK		C	Start/Memory key	2-5	JBTN-2382XHSA
2-8	JBTN-2385XHSC	AF		C	Copy/Help key	2-8	JBTN-2385XHSA
2-9	JBTN-2386XHSC	AG		C	Rapid dial key	2-9	JBTN-2386XHSA
2-21	PGIDM2650XHSC	AU		C	Document guide upper	2-21	PGIDM2650XHSE
2-901	DCEKP438CXH12	BH	N	E	Operation panel unit	2-901	DCEKP438CXH01
3-3	GCOVA2477XHSC	AG		C	Connector cover	3-3	GCOVA2477XHSA
3-4	MLEVP2380XHZA	AE		C	Hook switch lever	3-4	MLEVP2380XHZZ
3-14	PGIDM2619XHVG	AG		C	Hopper guide, left	3-14	PGIDM2619XHVA
3-15	PGIDM2620XHVG	AG		C	Hopper guide, right	3-15	PGIDM2620XHVA
3-16	PGIDM2649XHSC	AV		C	Document guide lower	3-16	PGIDM2649XHSA
5-1	CPAKC366GXH01	BA	N	D	Packing case with label	5-1	CPAKC224EXH03
5-2	TINSE4299XHTE	AN	N	D	Operation manual	5-2	TINSE4299XHTD
5-4	Not used	-		-	Setup guide	5-4	TCADH3457XHZZ
5-5	Not used	-		-	Registration card	5-5	TCADZ2891XHZZ
5-7	DUNTK497CXHSG	AY	N	E	Handset	5-7	DUNTK497CXHFW
5-8	LPLTP2889XHVC	AR		C	Paper tray	5-8	LPLTP2889XHVA
5-9	LPLTP2890XHVC	AL		C	Tray extension	5-9	LPLTP2890XHVA
5-10	LPLTP3264XHSC	AS		C	Document tray	5-10	LPLTP3264XHSA
5-11	PCOVA2115XHVD	AY		C	Paper tray cover	5-11	PCOVA2115XHVC
5-15	QCNWG209BXHGY	AN		C	Handset cord	5-15	QCNWG209BXHOW
5-25	Not used	-		-	Rapid key labels	5-25	TLABH446EXHZZ
6-901	DCEKC886UXHZZ	BN	N	E	Control PWB unit(Within ROM)	6-901	DCEKC580TXHZZ
6-140	VHIF004/TE52B	BG		B	IC, Flash ROM Ver.TE52B[IC5]	6-140	VHIF004/TC86A

[illegible]

2) Operation panel unit / Document guide upper

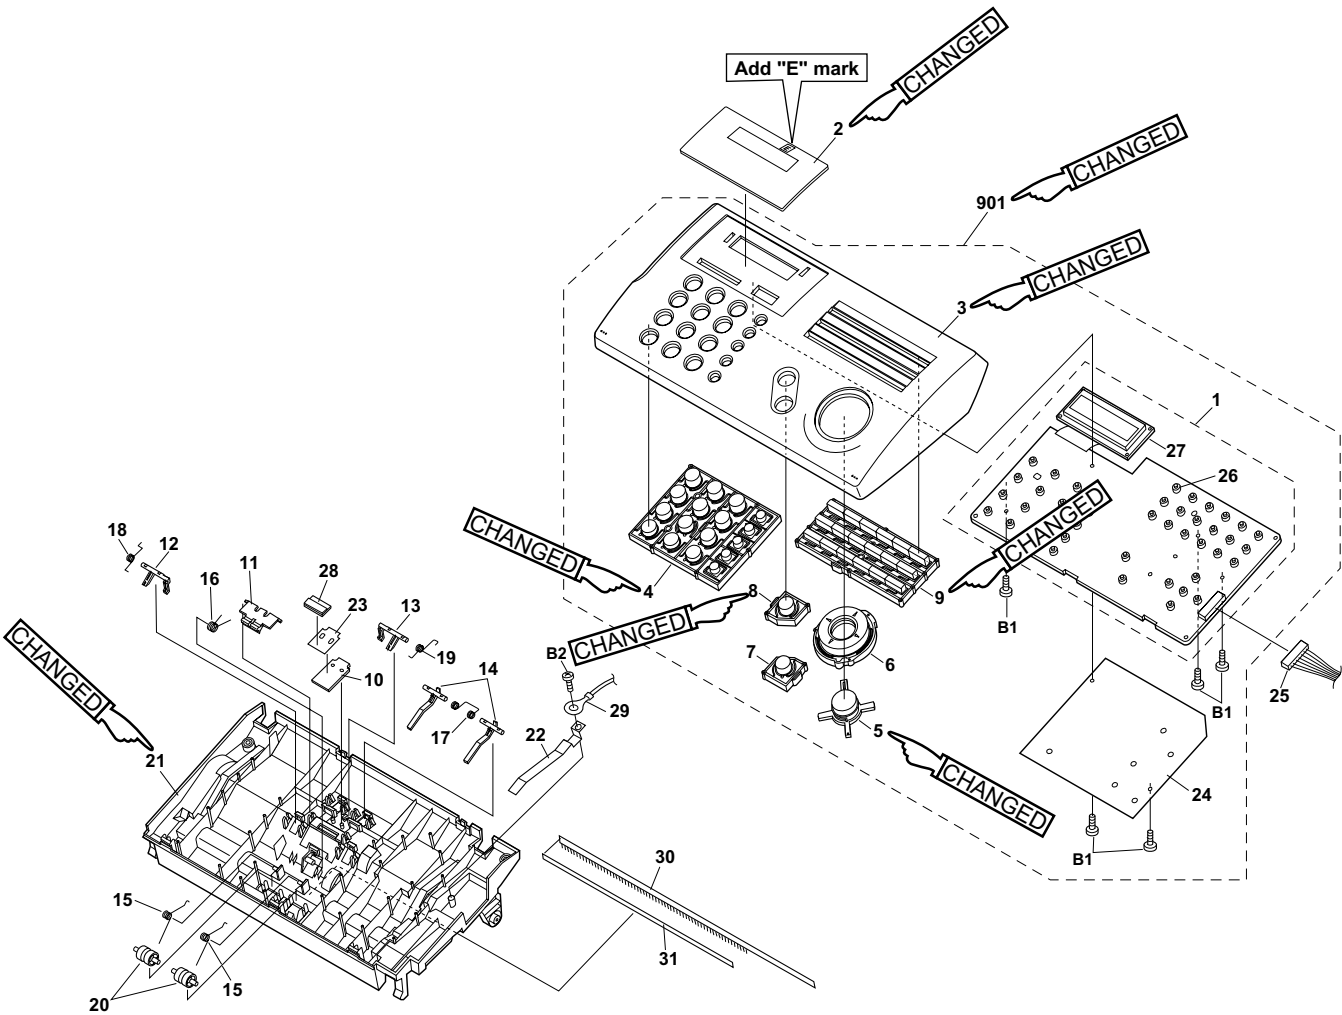

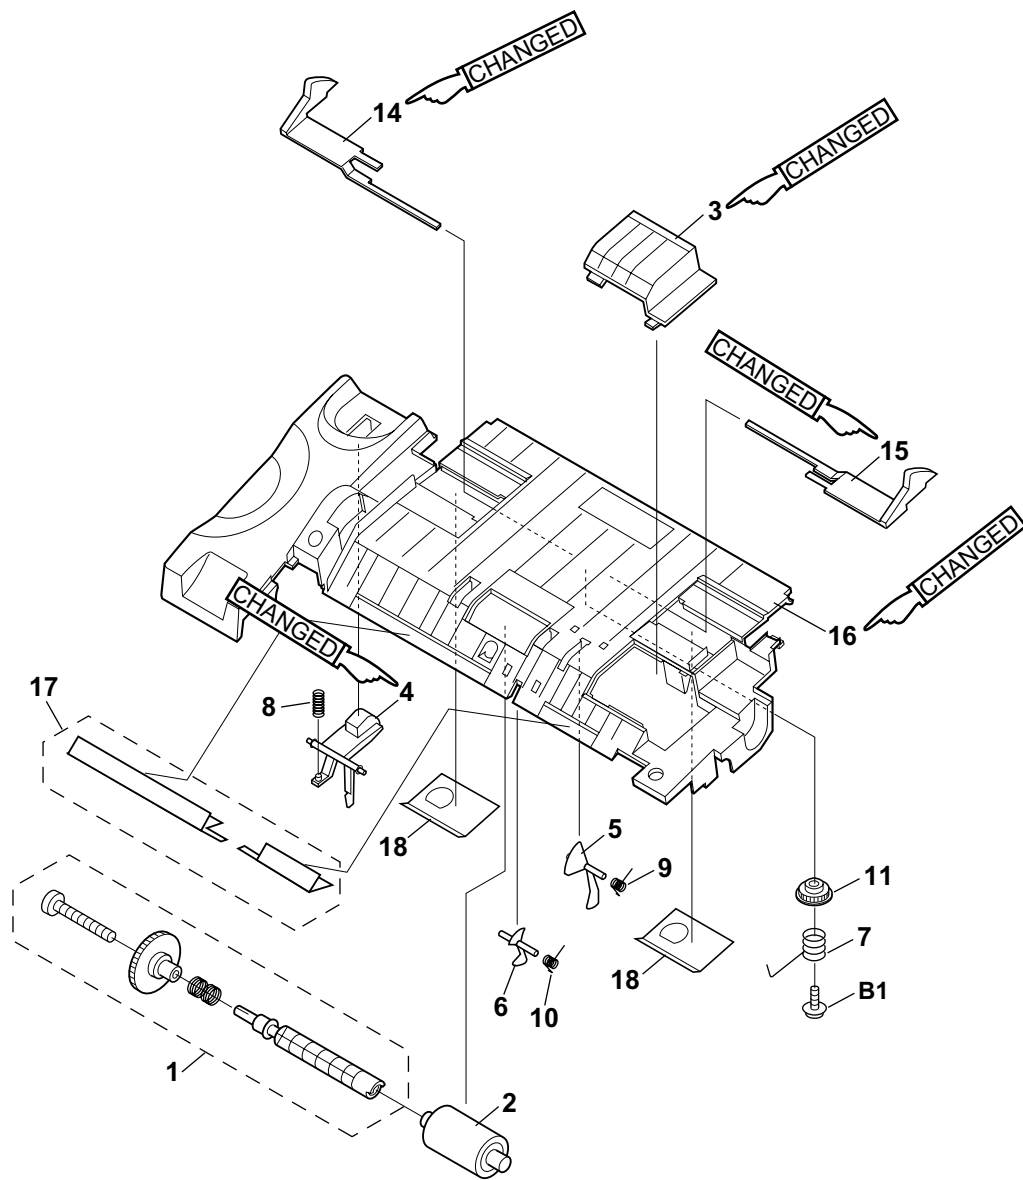

4) Printer unit

There is no change.



SHARP

COPYRIGHT © 2005 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP CORPORATION
Communication Systems Group
Quality & Reliability Control Center
Higashihiroshima, Hiroshima 739-0192, Japan

A0504-100SS•IS•T